



**Assembly Instructions  
for  
mefro - quality wheelbarrows**



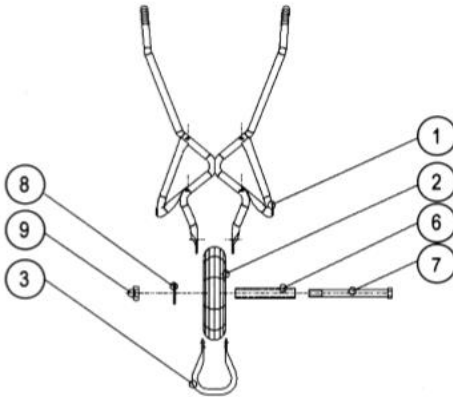

### Assembly of the Wheel

Place the frame ① upright onto the stands. Insert the spacer tube ⑥ into the bore of the wheel ② (not applicable for wheels with ball bearings). Insert the wheel ② between the shafts of the frame ① and fix the wheel with the axle bolt ⑦ by pushing the bolt through the rear bore of the frame and the wheel. (At purchase with tipping bow: Place both ends of the tipping bow ③ with cams down between the wheel and the shafts of the frame. Fit the washer ⑧ and nut ⑨ on the axle bolt and slightly tighten the nut).

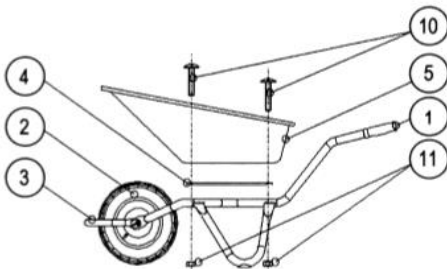

### Assembly of the Tray

Place the frame ① upright onto the wheel and the stands. Place the additional bottom plate ④ (applicable for wheelbarrows with an additional bottom plate only) onto the frame and align the tray above the 4 holes of the frame. Position the tray ⑤ in place, insert the flat head screws ⑩ from above and fix the screws with the nuts ⑪. Put the wheelbarrow in a vertical position and tighten all bolted joints.